

Quick Reference Guide for iGesture Products

Mouse - Substitute left hand if desired.



Point - Touch & slide any two adjacent fingertips, or optionally slide all five



Click - Lightly tap any two adjacent fingers



DoubleClick - Tap three adjacent fingertips



Right Click - Tap thumb, middle, & ring fingers



Drag/Select - Touch & move three fingers




Scroll - Touch & slide up/down four fingers



Zoom In/Out - Touch & expand/contract thumb & four fingers

Text Cursor

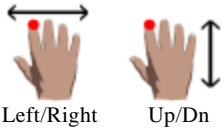


Left/Right Up/Dn

Arrows - Touch & slide any one finger



PgUp/PgDn - Spread four fingers, touch & slide up/down

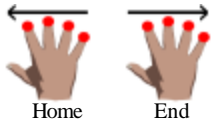


Home End

Home/End - Spread four fingers, touch & slide left/right




 Text Select - Spread three fingers, touch & slide up/down or left/right



Tab/BkTab - Thumb and finger touch & slide right/left --be quick for single tab

Internet Browsing - Use fingers shown.

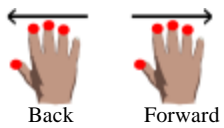

Back Forward

Back/Forward - Touch & slide left/right thumb & three fingers. Keep thumb away from fingers.




Refresh/Replace - Touch thumb & 3 fingers and slide down.

Number Pad -Enable with NumLock


Typing - Lightly tap key symbol.

File Operations - Use fingers shown, either hand.

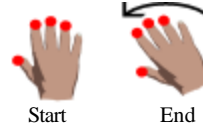


Start End

Open - Touch & rotate CCW thumb & three fingers

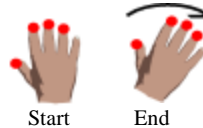


Start End

Close - Touch & rotate CW thumb & three fingers

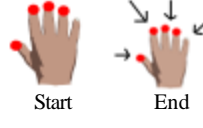

Start End

Save - Touch & contract thumb & three fingers

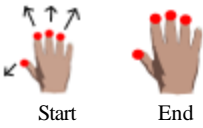


Start End

New - Touch & expand thumb & three fingers

Editing



Enter - Spread then tap thumb & pinky finger

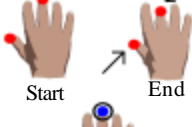

Start End

Cut - Touch & pinch thumb & middle finger



Copy - Tap thumb & middle finger



Paste - Touch & expand thumb & middle finger



Undo/Redo - Touch & slide up/down thumb & middle finger, quick for single step




Find - Touch & pinch thumb, middle, & ring finger



Group or Search Again - Touch & rotate thumb, middle & ring fingers


Application Control

Spread thumb and fingers - start with fingers near edges.

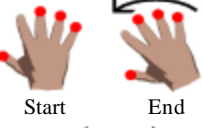

Start End

Open Desktop - Spread thumb & three outer fingers, touch & rotate CCW

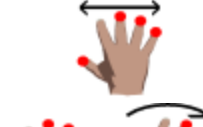

Start End

Switch - Spread thumb & three outer fingers, slide left/right, be quick for next/prev only



Start End

Exit - Spread thumb & three outer fingers, touch & rotate CW

 
 
 
FingerWorks

© 1999-2002 FingerWorks, Inc. All rights reserved

Web site: www.fingerworks.com

iGesture Game Mode Guide

Configuring for Game Mode

- ✧ **iGesture Pad customers** must use the *Feature Selector* control panel in the *MultiTouch Utilities* to enable and configure Game Mode.
- ✧ On the iGesture Numpad, iGesture Mini, iGesture Keyboard, and iGesture Retro, the *config gesture*  lets you customize your unit by holding fingers in all four corners for 1 second. (Always do this in a text window to see resulting messages).
- ✧ Before using game mode the first time, you must , then press <Shift>G or Pause.
- ✧ Pinky key/button actions can be toggled off/on by , then touching *Period* (.) key.
- ✧ Both thumb and index triggers are always available--just use one base pointing chord or the other.

Entering and Leaving Game Mode


Activate Game Gestures


 


To activate game mode, press your palm heel on the center of the surface and slide them forward. The normal gesture set will be disabled and replaced with the game gestures shown below. Keys will be more responsive than normal but will not activate if more than one finger touches a surface half. **To restore normal operation, you must remember to reverse these gestures, pulling both palm heels toward you!**


Deactivate Game Mode





Point and Fire

Allows simultaneous control of the mouse pointer and pressing of fire buttons.



Thumb Trigger

 
 
 *Pointing Only*  *Pointing + Mouse1*
(left mouse button)  *Pointing + Mouse2*
(right mouse button)  *Pointing + Mouse1 + Mouse2*


Index Trigger

 *Pointing Only*  *Pointing + Mouse1*
(left mouse button)  *Pointing + Mouse2*
(right mouse button)  *Pointing + Mouse1 + Mouse2*


Additional Game Button Clicks

 *Wheel Up*  *Mouse3*

 *Mouse4*  *Mouse5*

 *Wheel Down*

General Gesturing Tips

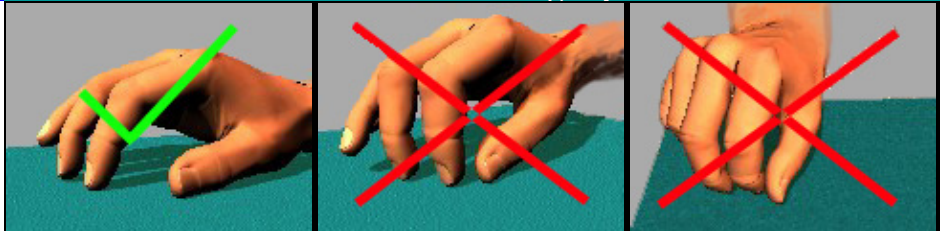

For right click and other gestures that use the thumb, try to touch with the long, flat side of your thumb rather than its tip.

For right click and other gestures that use the thumb, keep the thumb spread a couple inches from the fingertips.

Avoid exaggerated hand rotation for gestures like *OPEN* and *CLOSE*. Start with a neutral hand position and slightly twist the fingertips.

General Pointing Tips



Feel free to use alternate fingertip pairs. Pointing can be done with any two adjacent fingertips excluding the thumb.

Relax. No need to press hard on the surface. A *light* touch works best.

Don't squeeze your fingertips together or spread them far apart. Keep them relaxed and slightly separated.

Holding suspended fingers too high is fatiguing. You can drop them on the surface *after* starting a point, drag, or scroll operation.

For fine scrolling, dragging, or pointing, *ROLL* your fingertips rather than slide them.

General Tips

Copyright © 2001-2003 FingerWorks, Inc. All Rights Reserved. <http://www.fingerworks.com>